



StreamPod & MicroPod Air

# Restore Factory Settings

A factory reset is a software restore of the device to its original default system state by erasing all of the information (like your presets) stored on the device.

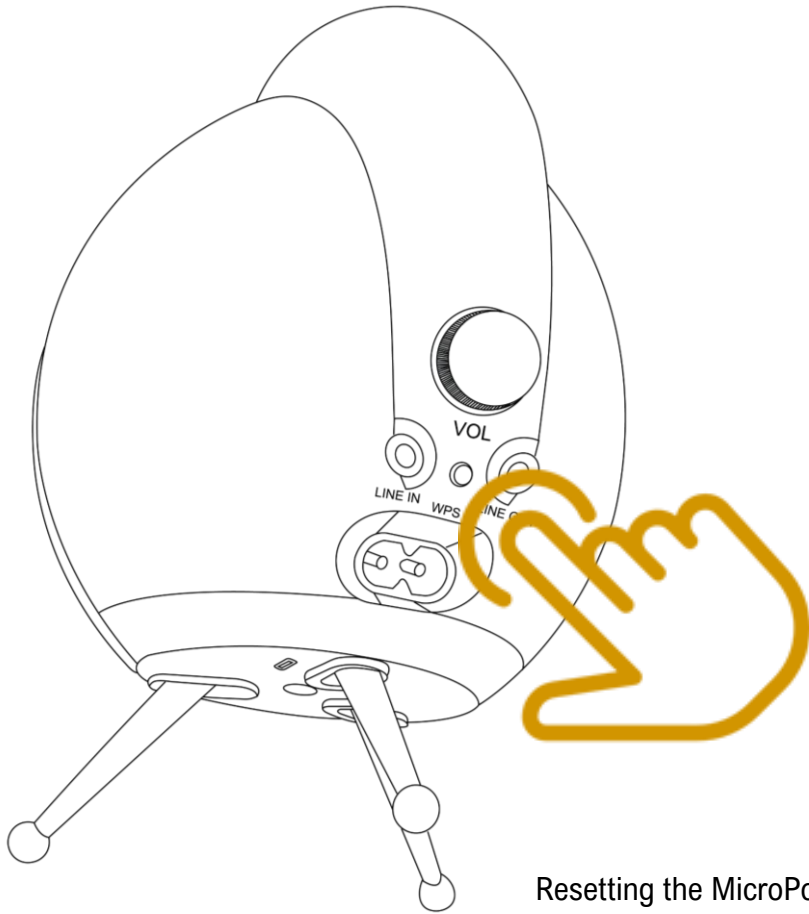

Resetting the MicroPod or StreamPod is easy – just push the WPS button in 4-5 seconds and follow the voice prompt to re-install the product on your wifi network.

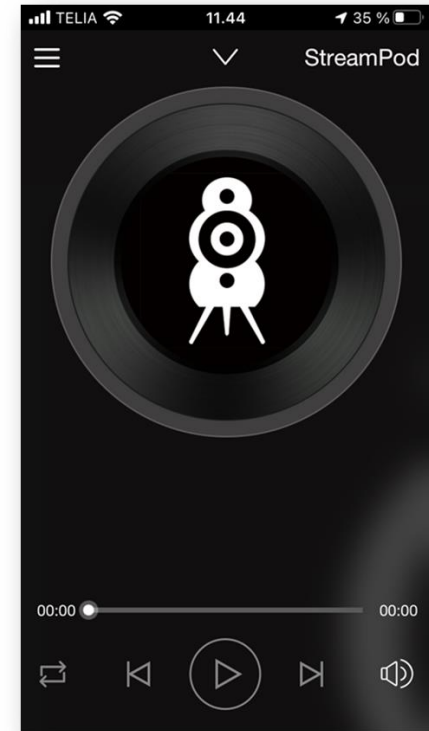


You can also use the Podspeakers App to restore the factory settings – follow the instructions on the next pages.


The product must be connected to your wifi network – and visible on the Podspeakers app. Swipe to Devices list.




In the Devices list Tap the "settings" button on the product you want to "factory reset"

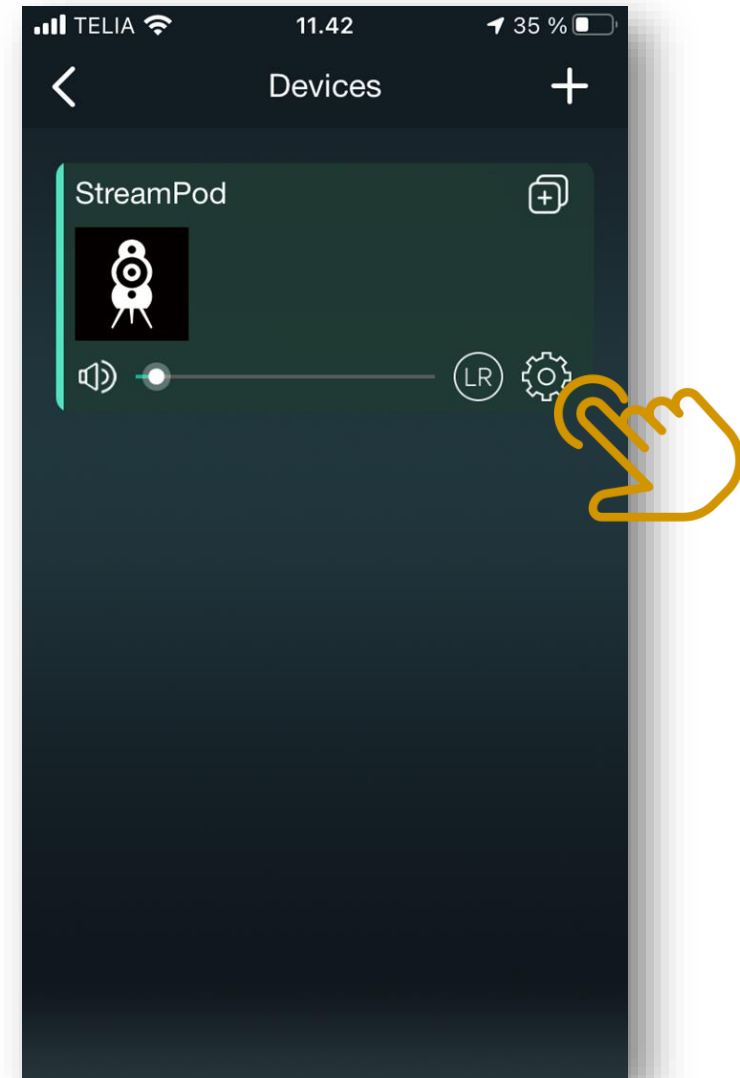


Tap the Speaker Info button

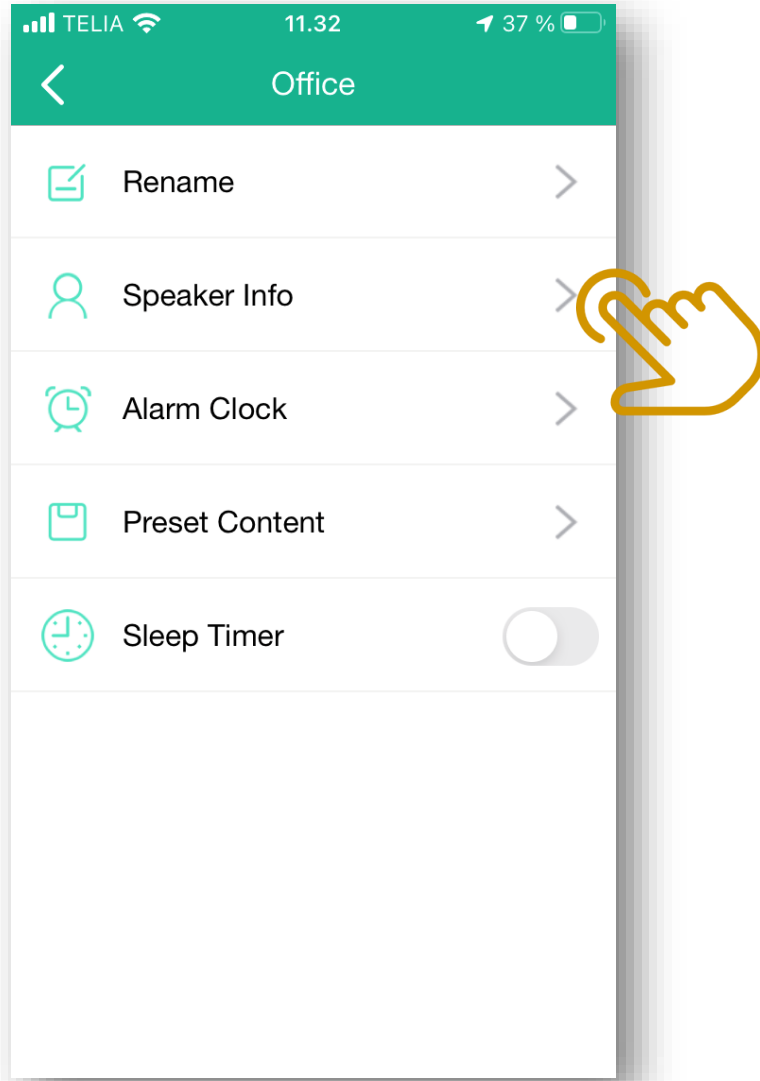


Tap the Restore Factory Settings and follow the voice prompt and connect the device to your wifi network again.

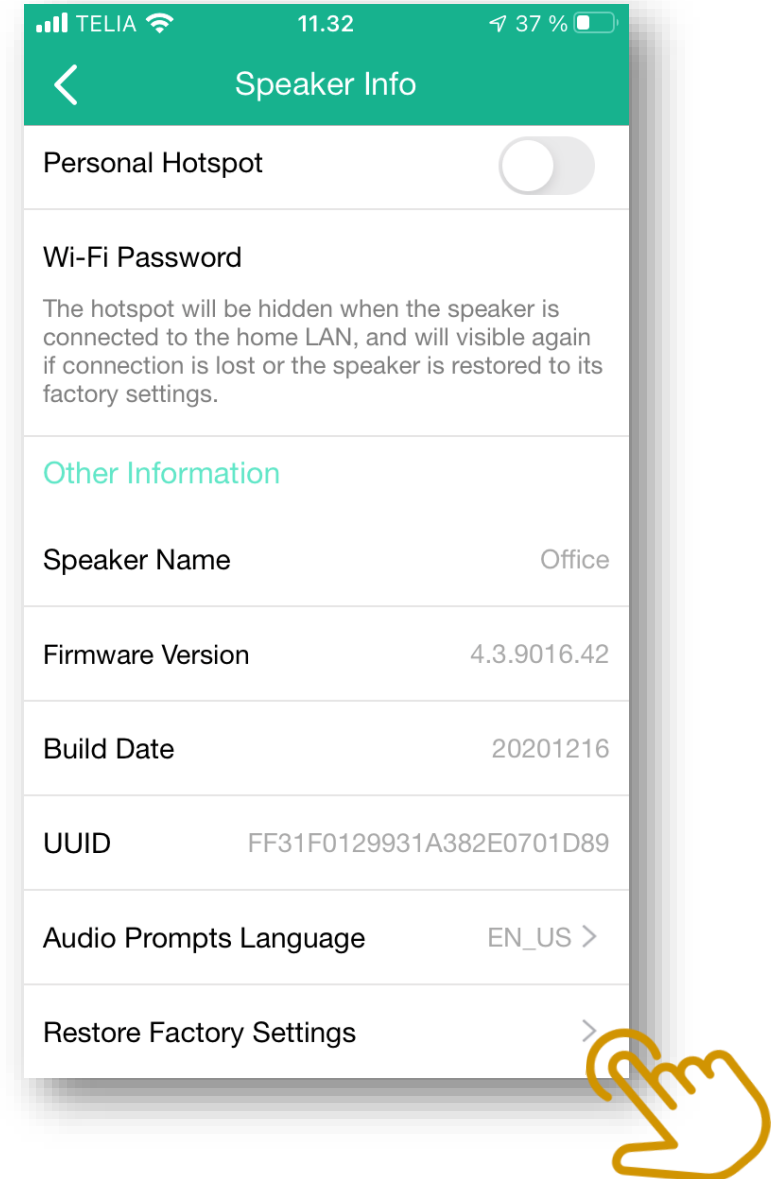

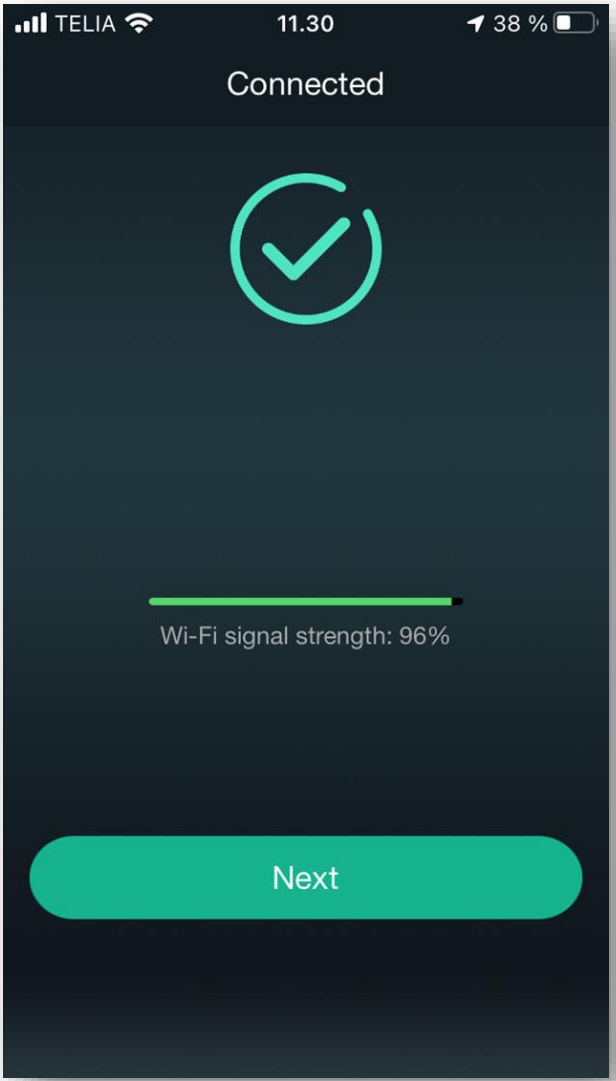

Connected

 

Wi-Fi signal strength: 96%

Next